


Screen-Print Placement Guide

Standard placement zones for DTG, screen print & heat transfer designs

Measurements in inches — scale to garment size

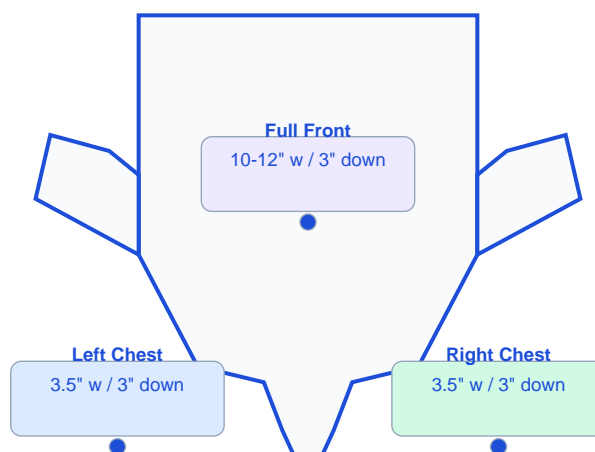

Back Placements:

Upper Back: 12" wide, 2" below collar seam

Lower Back: 10" wide, 4" above hem

Sleeve: 3.5" wide, centered on sleeve cap